



Memorandum

JUNGHEINRICH

To: Judit-4 Update Recipients

cc:

2013-06-1

VK-BA1 / Bernd Glienicke

Tel.: +49 (0) 40 – 52 69 32 50

Fax: +49 (0) 40 – 52 69 34 36

bernd.glienicke@jungheinrich.de

Software JUDIT-4 – Version 4.28 – Issue 07/13

Ladies and Gentlemen,

Together with this memo you are receiving the current Jungheinrich diagnostic tool software on this DVD.

Changes and supplements:

The following items have been improved or newly introduced in this issue:

- **Miscellaneous projects revised**
- **Project EJC_Z_2xx_2010 replaced by two particular projects:**
 - **EJC_2xxz_2010 and EJC_2xx_Bxx_2011**
- **Selection Katliste.csv aligned**

Updates of this file: <http://www.intranet.jungheinrich.de/3028.html>
→ **JUDIT – JUDIT-4 – Dokumente – ReadMe_4.28**

Validity of the software JUDIT 4 - version 4.28 (07 / 13):

The software is valid until 2014-01-31 and will be replaced in time by version 4.29.

System requirements:

- **Windows XP - SP3 (SP2 is NOT sufficient!)**
- **Alternatively Windows 7 – SP1 (does NOT apply all parts of “Zusatzdiagnose”!)**
- **XGA-graphics (High Colour 16 Bit with 1024 x 768)**
- **DVD-Drive**
- **Minimum 2.5 GB of free Hard Disk Space**
- **Security Control Client (>= Version 4.4.7.0) installed and enabled**
- **Acrobat Reader installed, only Version 6.01 to 6.06 or X (10)!**
- **Current up to date Judit-4-license-file ("License_JH.lfj")!**

Good luck with the Diagnostics JUDIT-4.

Kind regards,


Bernd Glienicke




Initial Setup on service laptop:

1. Judit-4

- **Note:** the initial setup requires admin permissions!
(For initial setup under control of JH-MTATools see page 4)
- Insert DVD and launch Windows Explorer.
- Right click **Judit-4-Installer.exe** to start installation.

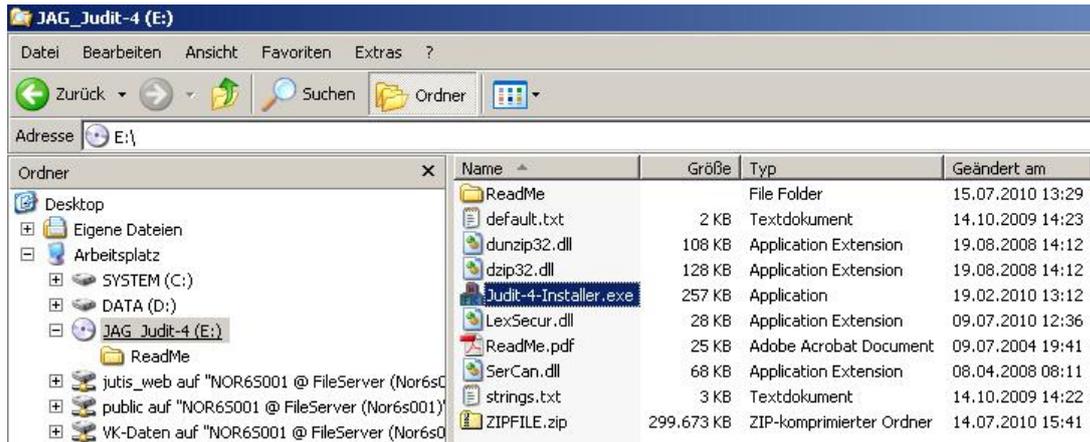

- Mark "**Update**". Finally click button "**Start**".

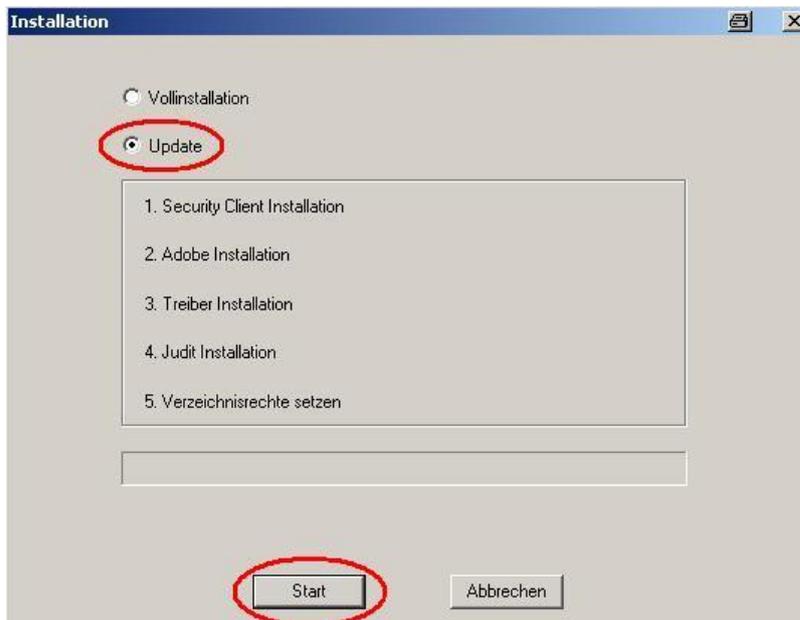

- Mark "**Full installation**" if an older version has to be uninstalled (the content of the folder "C:\Program Files\Jungheinrich AG\Diagnose\Judit-3" will be deleted completely!). Finally click button "**Start**".




- End of installation is indicated by the following dialog box. Hit Button "OK" to exit.



- Make sure that the Judit-4-license file "License_JH.lfj" is present inside the folder "C:\Program Files\Jungheinrich AG\Diagnose\ Judit 3\Kunde", otherwise you will receive an error message "100" when starting Judit-4 !
- **Note:** JUDIT 4 **must** be installed to C:\Program Files\Jungheinrich AG\Diagnose\JUDIT-3 !

2. Auxiliary Diagnostic Program and OEM-Software (see also "Zusatzdiagnose 4.27.pdf")

- For installation of the Auxiliary Diagnostic Program "**Zusatzdiagnose-Setup.exe**" has to be executed from the DVD.

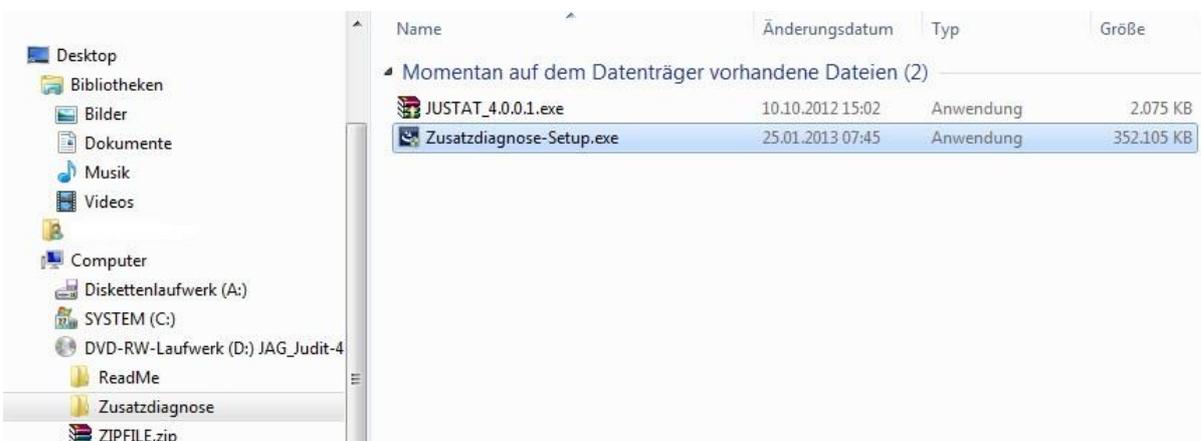


- **Note:** during the installation of SICK software "CDS" you will be asked for restarting. Please click on button "NO" and restart only when installation has finally finished!



Installation via JH-MTATools:

- If JH-MTATools (> = version **1.00.0010**) is present on the service PC, installation is possible with only user permissions. No admin required.
- Insert DVD and open Windows-Start-Menu. Run "Judit 4 Setup" under Start / Program Files / JH-MTATools.

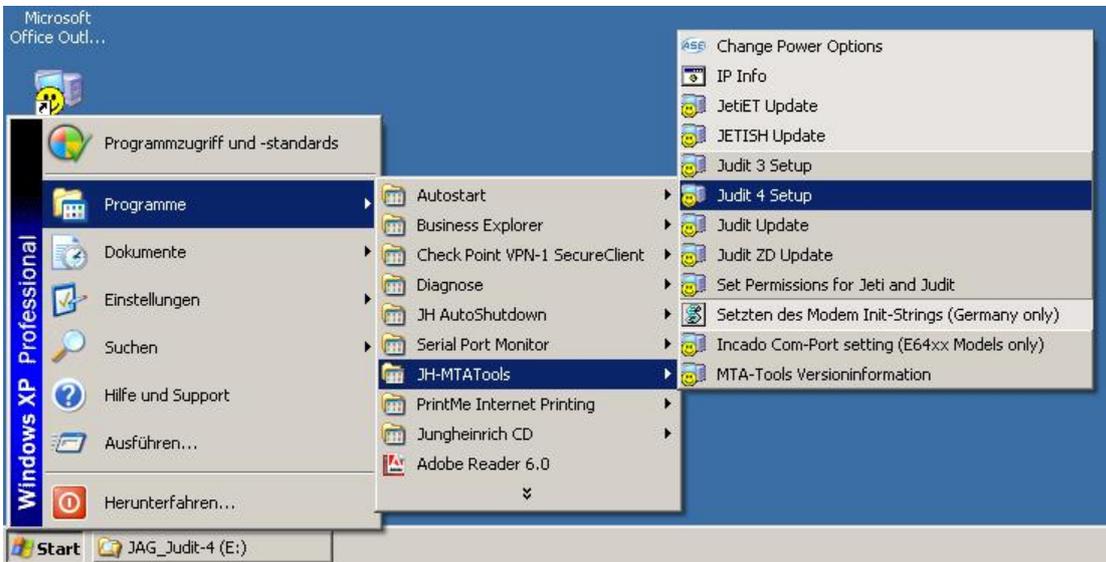

- If not currently present, copy license file "**License_JH.lfj**" into the folder "**C:\Program Files\Jungheinrich AG\Diagnose\ Judit-3\Kunde**", otherwise you will receive the error message "100" when starting Judit-4 !
- For installation of the Auxiliary Diagnostic Program "**Zusatzdiagnose-Setup.exe**" open Windows-Start-Menu. Run **Start / Programme / JH-MTATools / Judit ZD Update**. Please follow the note on page 3 below!

